


## Install Guide

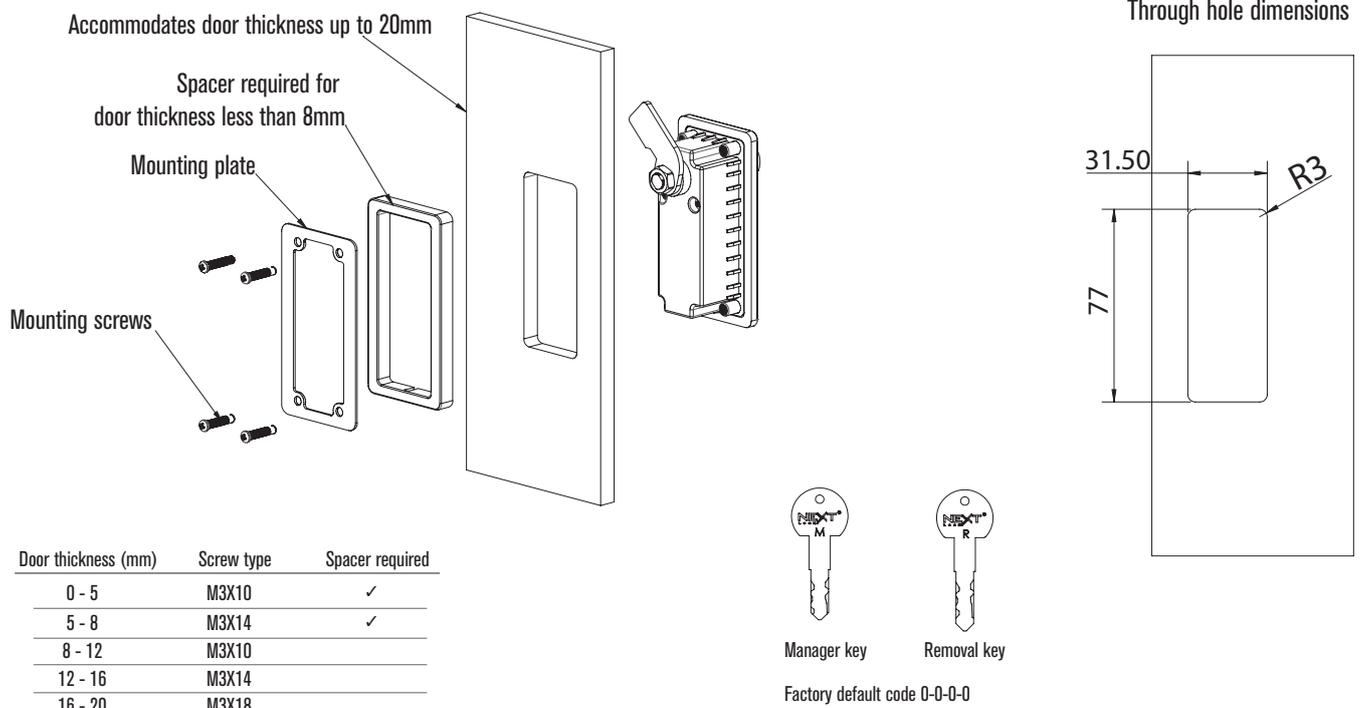

## Operate with a code

### To Lock:

1. Close the door.
2. Make sure the knob is in the position.
3. Set any 4-digit code.
4. Turn the knob to the position.
5. Scramble the code.

### To Unlock:

1. Enter your 4-digit code.
2. Turn the knob to the position.
3. Open the door.
4. Scramble the code.

## Operate with the Manager Key


1. Insert the Manager Key.
2. Turn the knob to the position.
3. Open the door.

**Note:** If opened in error, use the Manager Key to turn the lock to the position. The original code will continue to operate the lock.

If the code is forgotten, follow the Reset Instructions to make the lock available for another user.

## Reset Instructions

1. Insert the Manager key.
2. Turn the knob to the position.
3. Remove the Manager Key.
4. Insert the Reset Tool.
5. Push in the Reset Tool and simultaneously turn all dials until it stops.
6. The final code displayed is the current code.
7. Turn the knob to the position.

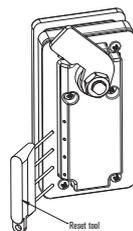


Distributed By

**RFS**  
SPORTS


# Change Core Instructions

If the Manager Key is lost or stolen, contact [support@digilock.com](mailto:support@digilock.com) for a replacement Set (Manager Key, replacement Removal Key, and Cores).

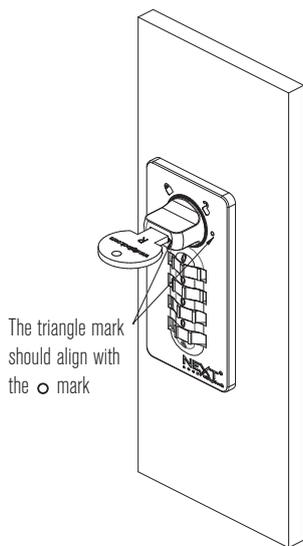


The triangle mark should align with the ○ mark

Turn the knob to ☞ position.  
Insert the removal key and turn the knob to ○ position.

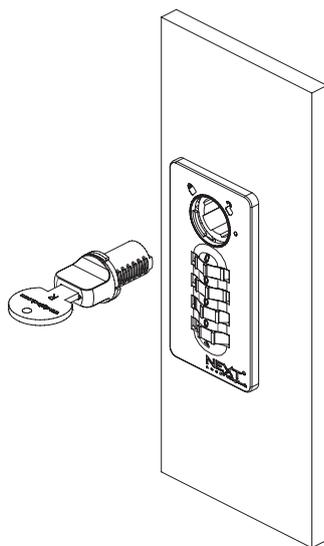


Pull the key to remove the knob and core.

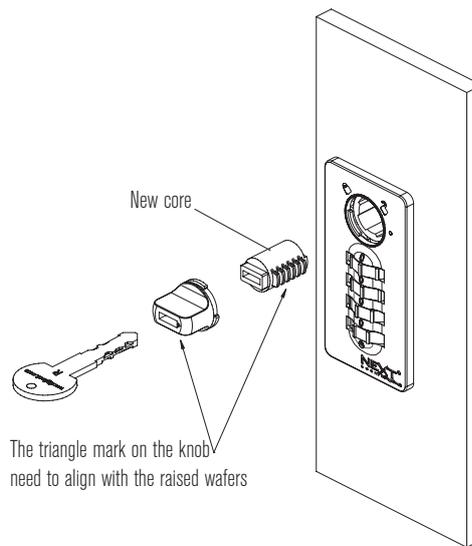


New core  
The triangle mark on the knob need to align with the raised wafers

Insert the replacement Removal Key into the knob and place a new core on the knob. The triangle mark on the knob should align with the raised wafers.

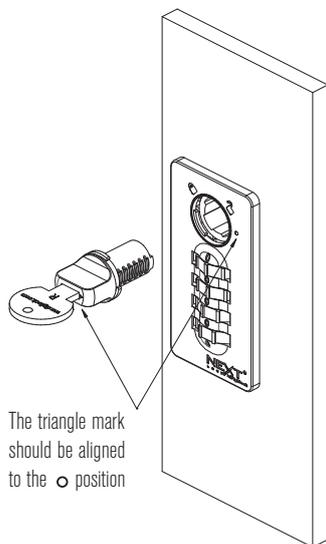

The triangle mark should be aligned to the ○ position

Insert the new core subassembly into the lock. The triangle mark on the knob should align with the ○ position.

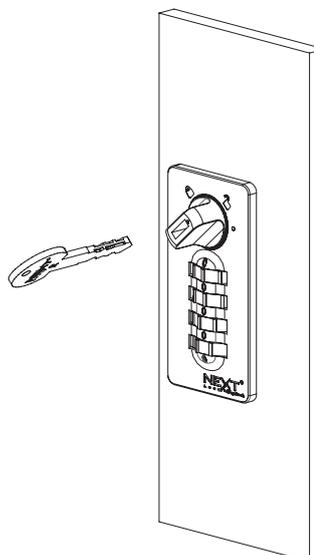

Turn the knob to ☞ position. Remove the replacement removal key.